
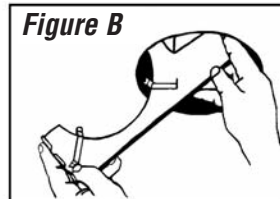



INSTALLATION INSTRUCTIONS FOR REMODELER HOUSING

Installation Instructions for Remodeler Housing

All remodeler frame in kits are supplied from the factory with a section cut out from the housing pan. Also three remodeler clips are supplied with all remodeler housings. Please note any remodeler housings supplied by the factory are not supplied with any type of bar hanger.

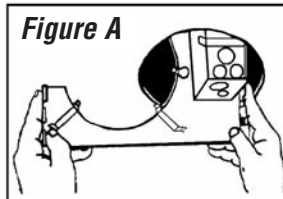

Incandescent/Fluorescent

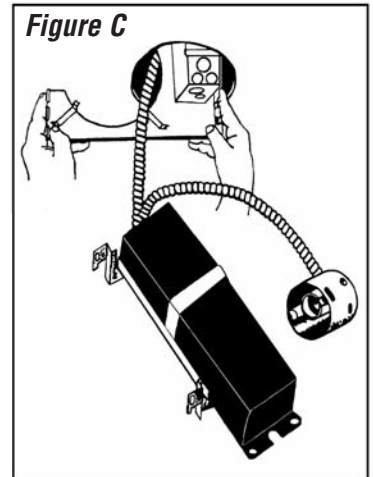

HID with Remote Ballast

STEP 1

The recessed pan is inserted into the ceiling opening and rotated into position in the ceiling opening as noted in **FIGURE A** and **FIGURE B**.

STEP 2

For installation of HID fixtures, the ballast assembly is required to be disconnected from the fixture pan and inserted into the ceiling after the pan is secured in place. Supplied from the factory on all HID remodeler ballasts are mounting feet that must be secured to the building structure as shown on (**FIGURE C**).

STEP 3

The recessed pan can be secured to the ceiling using fasteners (Drill Screws) or held in position with the remodeler clips supplied from the factory (**FIGURE D**).

STEP 4

With the socket assembly suspended below the ceiling (**FIGURE E**), test the installation with the appropriate lamp(s) prior to attachment of the reflector trim (**FIGURE F**).

STEP 5

Insert reflector into ceiling (**FIGURE G**)

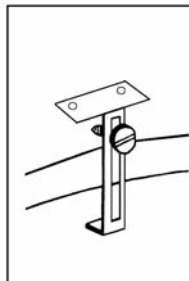


Figure D

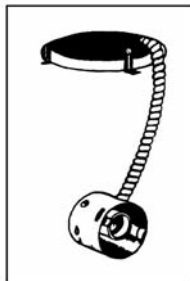


Figure E



Figure F


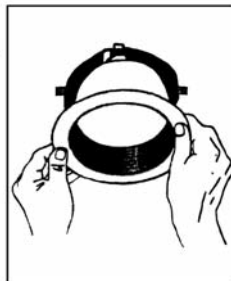


Figure G

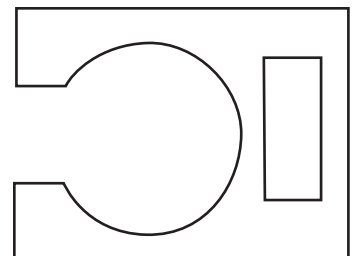

Cut 2 1/2" Out

▲ See Options and Finishes pages for a list of additional finishes and equipment.

Vantage reserves the right to change components, finishes or design details in any manner which does not alter the installed appearance or reduce performance and intended function.