

WALL MOUNTED WET LOCATION CYLINDER

Wall Mounted Wet Location Cylinder Installation Instructions

Each wet location up/down cylinder is shipped with a factory installed mounting arm and back plate mounting bracket.

1) Mount the mounting bracket to any 4" junction box using large head fastener screws. These fasteners need to accommodate the cylinder weight (*Approx. - 30 Lbs*)

NOTE: The junction box needs to be a re-enforced junction box that can handle a 30 pound load.

2) Wire fixture according to local codes by a qualified electrician.

Leads & Labeling

Top Lamp - shall be labeled **L1**

Bottom Lamp - shall be labeled **L2**


Each set of leads will include a White and a Black. The ground is pre-wired by the factory in the cylinder with 1 green lead for both ballasts.

3) Then slide the wall mount arm over the mounting bracket making sure to align the wall mount arm fastener to the wall mount arm. Firmly screw in the set screw to the back plate over the wall mount arm with the hardware supplied.

NOTE: When the cylinder is firmly set a bead of high quality silicone needs to be run around the are of the cylinder sealing the wall mount arm to the wall.

4) The final assembly is to install the lower reflector.

To lamp the upper portion of the reflector - unscrew the 3 set screw with an allen wrench.

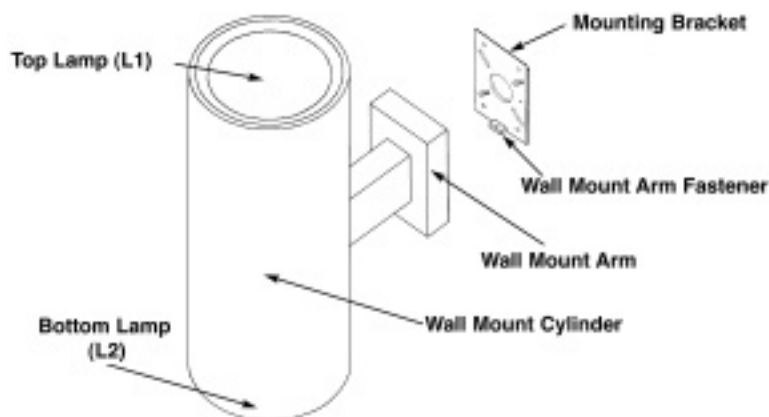

▲ See Options and Finishes pages for a list of additional finishes and equipment.

Vantage reserves the right to change components, finishes or design details in any manner which does not alter the installed appearance or reduce performance and intended function.