

# F-Class Commercial Retrofit Kit

## Installation Instructions



### STEP 1

Turn off Power.

### STEP 2

Remove existing reflector and disconnect whip from junction box.

### STEP 3

Attach Vantage light engine power lead to power of existing junction box.

### STEP 4

Insert light engine through existing hole in ceiling

### STEP 5

Attach Vantage clips to existing frame, use the clips shaped like an L on horizontal frames with the long legs on the pan or the clips shaped like a U on a vertical flange with the long sides on the inside of the flange.

### STEP 6

Attach reflector with screws through the key slots in the reflector to the light engine housing.


### STEP 7

Install reflector up into frame.


### STEP 8

Energize.

#### F-CLASS COMMERCIAL RETROFIT KIT CONTENTS

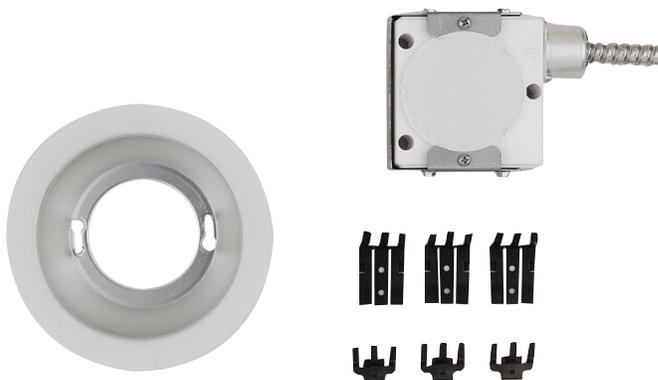

#### F-CLASS COMMERCIAL RETROFIT KIT

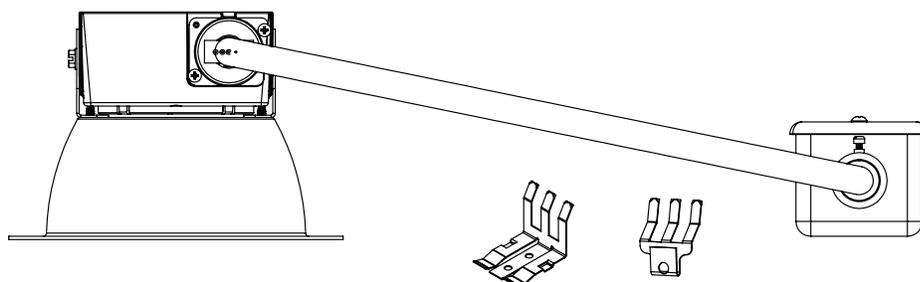

Vantage reserves the right to change components, finishes or design details in any manner which does not alter the installed appearance or reduce performance and intended function.