

F-CLASS Gen V Remodeler Kit Installation Instructions



STEP 1

Insert recessed pan into the ceiling opening and rotate pan into position as note in Figure A and Figure B.

STEP 2

Secure recessed pan to ceiling using fasteners (Drill Screws) or held in position with the remodeler clips supplied from the factory.

STEP 3

Attach existing power lead to Vantage junction box.

STEP 4

Insert light engine through existing hole in the ceiling

STEP 5

Attach reflector with screws through key slots in the reflector to the light engine housing.

STEP 6

Install reflector into recessed pan (pan prefitted with friction clips).

STEP 7

Energize

Cut 2 1/2" Out

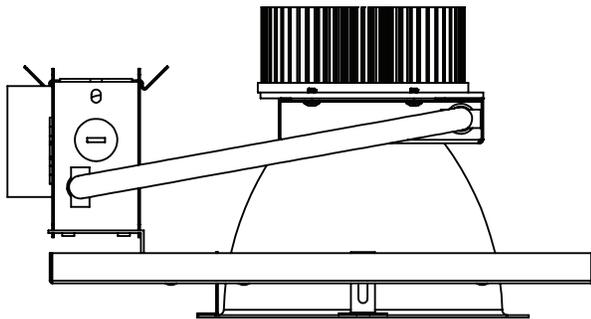
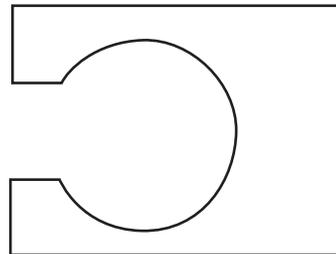


Figure A


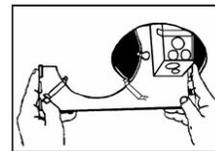



Figure B



F-CLASS GEN V REMODELER

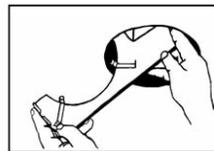

F-CLASS GEN V REMODELER KIT CONTENTS

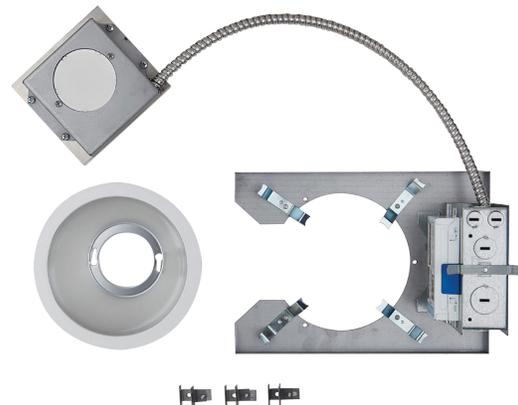

Vantage reserves the right to change components, finishes or design details in any manner which does not alter the installed appearance or reduce performance and intended function.